

# NETWORK CAMERA SERIES

## ADVANCED NETWORK SETUP

Please read instructions thoroughly before operation and retain it for future reference.

## IMPORTANT SAFEGUARD



All lead-free products offered by the company comply with the requirements of the European law on the Restriction of Hazardous Substances (RoHS) directive, which means our manufacture processes and products are strictly "lead-free" and without the hazardous substances cited in the directive.



The crossed-out wheeled bin mark symbolizes that within the European Union the product must be collected separately at the product end-of-life. This applies to your product and any peripherals marked with this symbol. Do not dispose of these products as unsorted municipal waste. Contact your local dealer for procedures for recycling this equipment.



This apparatus is manufactured to comply with the radio interference requirements.

### ***Federal Communications Commission Interference Statement***

This equipment has been tested and found to comply with the limits for a Class B digital service, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Any changes or modifications made to this equipment may void the user's authority to operate this equipment. This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- All external cables connecting to this basic unit must be shielded.

For cables connecting to PCMCIA cards, see the option manual or installation instructions.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device must not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### ***Trademark Acknowledgements***

iPad® & iPhone® are the registered trademarks of Apple Inc.

Android™ is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Microsoft®, Windows® & Internet Explorer® are registered trademarks of Microsoft Corporation in the United States and/or other countries.

### ***Disclaimer***

We reserve the right to revise or remove any content in this manual at any time. We do not warrant or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of this manual. The content of this manual is subject to change without notice.

This product doesn't have a standby / shutdown mode.

## ***MPEG4 Licensing***

THIS PRODUCT IS LICENSED UNDER THE MPEG4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM).

## ***GPL Licensing***



This product contains codes which are developed by Third-Party-Companies and which are subject to the GNU General Public License ("GPL") or the GNU Lesser Public License ("LGPL").

The GPL Code used in this product is released without warranty and is subject to the copyright of the corresponding author.

Further source codes which are subject to the GPL-licenses are available upon request.

We are pleased to provide our modifications to the Linux Kernel, as well as a few new commands, and some tools to get you into the code. The codes are provided on the FTP site, and please download them from the following site or you can refer to your distributor:

<http://download.dvrtw.com.tw/GPL/IPCAM/F-Series/linux.tar.gz>

# TABLE OF CONTENTS


1. CAMERA NETWORK CONFIGURATIONS .....	5
1.1 Assemble & Install Camera .....	5
1.2 Understand How Your Laptop / Computer Connect to Internet .....	5
1.3 Wireless Router + Modem.....	6
1.3.1 Configure on Laptop / PC.....	6
1.3.2 Configure on iPhone / iPad .....	8
1.4 Router + Modem .....	10
1.5 Modem / Hub + Modem.....	12
1.6 Change Default Account .....	15
1.6.1 From Web Browser .....	15
1.6.2 From iPhone / iPad .....	15
2. BEFORE YOU START TO USE .....	16
2.1 Video Adjustment .....	16
APPENDIX 1 CHANGE IP ADDRESS OF YOUR LAPTOP / PC .....	17
APPENDIX 2 MOBILE SURVEILLANCE VIA EAGLEEYES .....	20
A2.1 Prerequisites .....	20
A2.2 Where to download .....	20
APPENDIX 3 CONFIGURE PORT FORWARDING .....	21
APPENDIX 4 Q&A .....	22

# 1. CAMERA NETWORK CONFIGURATIONS

Please follow the instructions below to finish camera installation and network configurations.

You may configure the network connection of this network camera with your laptop / computer, or with your iPhone® or iPad® based on your network environment.

## 1.1 Assemble & Install Camera

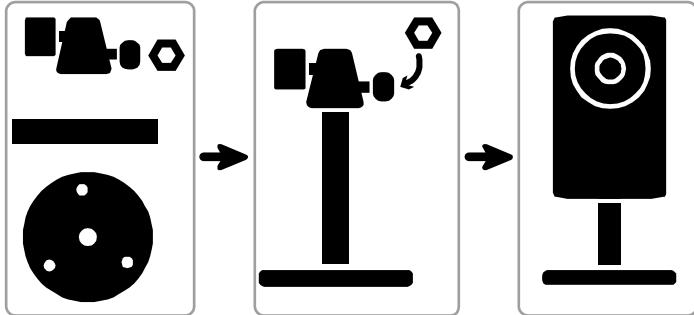

Step1: Fasten the base of the bracket (the round one) to where the camera is installed.

**Note:** The distance between your camera and the location you want to monitor should be 3 ~ 4 meters, for the built-in human detection function to work properly.


Step2: Assemble the bracket and the camera, and adjust the viewing angle of the camera.

Step3: Connect the supplied power adapter to the camera's power jack (DC 5V / 2A) on the rear panel and the power outlet.


Step4: Continue to proceed network configurations as instructed in the following sections.

## 1.2 Understand How Your Laptop / Computer Connect to Internet


### 1. Wireless router + Modem

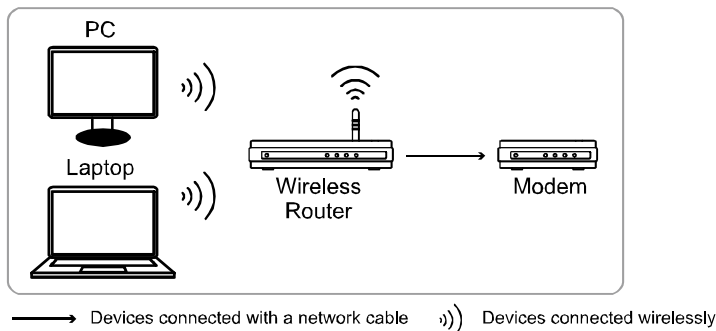

### 2. Router + Modem

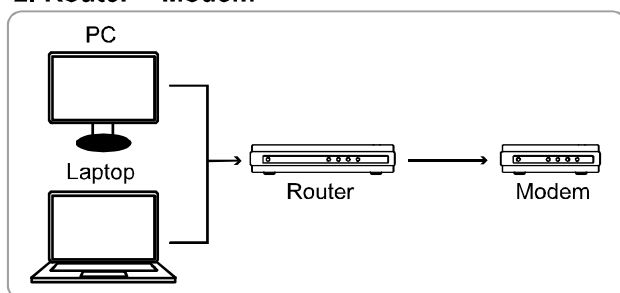


### 3. Modem or Modem + Hub

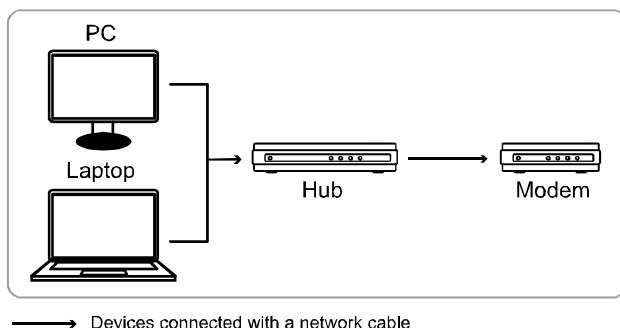

Then, connect your network camera directly to your wireless router / router / hub / modem with a network cable, and power it on.

---

**Note:** Check  (LAN) status indicator is always on, not blinking. If it's blinking, check your RJ45 network cable and ensure it's not disconnected or defect.

---

If you're using:

- Wireless router + modem, please refer to "1.3 Wireless Router + Modem".
- Router + modem, please refer to "1.4 Router + Modem".
- Modem or modem + hub, please refer to "1.5 Modem / Hub + Modem".

For your account safety, it's recommended to change the default account setting. For details, please refer to "1.6 Change Default Account" at page 15.

## 1.3 Wireless Router + Modem

You may use your laptop / PC, or your iPhone / iPad to complete the network configuration of the camera.

### 1.3.1 Configure on Laptop / PC

Before configuring this camera on your laptop / PC, make sure:

- Your Windows operating system is Windows 7, Vista or XP.
- (Recommended) Your wireless router supports UPnP, and this function is enabled.

---

**Note:** If your wireless router doesn't support UPnP, you need to additionally access your router for port forwarding. For details, please refer to "APPENDIX 3 CONFIGURE PORT FORWARDING" at page 21.

---

- You have noted down the IP address of your router, and the assigned IP address(es) and port(s) of other devices connected to the same router.

---

**Note:** For details, please refer to the user manual of your wireless router, or check with your installer.

---


- You have downloaded "IPScan.exe" in your laptop / PC.

---

**Note:** Please download "IPScan.exe" from [www.surveillance-download.com/user/m301.swf](http://www.surveillance-download.com/user/m301.swf).

---

Step1: Connect your laptop / PC to the wireless network with the camera connected.

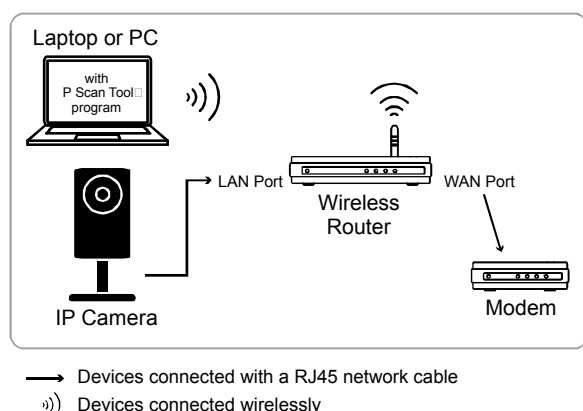

Step2: Open "IPScan.exe" (🔍) to search your camera, and:

- Note down the IP address and port number after search, such as "192.168.2.25" and "88" in our example.
- Select the IP address, and click "Configure" to note down the gateway IP address. It's the address of your wireless router, and you might need it later for port forwarding.
- Change the port you're using for this camera to other value (such as "8080") in "Web Port" if you know the default port number "88" is blocked by your Internet service provider or phone carrier. Then, enter the user name (admin) and password (admin) to confirm.

The number of "80" is not recommended to use since some Internet service providers and phone carriers might block the use of "80".

**192.168.2.25:**  
IP address assigned by  
your wireless router

**GateWay:**  
The IP address of  
your wireless router

**Web Port:**  
Keep the default value "88",  
or change it to other value  
(such as 8080) if the port  
number of 88 is blocked by  
your service provider.

Step3: Open Internet Explorer on your laptop / computer, and enter the IP address and port number you just found in the URL column to access this camera.

The format is <http://ipaddress:portnum>, such as <http://192.168.2.25:88> in our example.

In the login page, enter the user name, password, and security code to access.

---

**Note:** Please skip the wizard.

---

Step4: Go to "Config." → "DDNS", and enable the DDNS service.

- If your router supports UPnP, please proceed Step5.
- If your router doesn't support UPnP, note down the host name, such as *MAC000e531d6ff1.ddns.eagleeyes.tw*, and click "Save". Then, access your wireless router for port forwarding as instructed in "APPENDIX 3 CONFIGURE PORT FORWARDING" at page 21.

Step5: Go to "UPnP", and enable the UPnP service.

Then, enable "Port Mapping", and click "Save" to start port mapping automatically.

When the configurations are saved successfully, you'll see a message indicating the IP address and port number assigned to your camera.

Note down the IP address and port number, and log out the camera.

### **Check your connection**

Step1: Connect your laptop / PC to Internet with the wireless network other than the camera is connected.

Step2: Enter the IP address or host name you just noted down and the port number in the URL address box of the web browser, and see if you can enter the login page of the camera successfully.

The format is "<http://ipaddress:portnum>" or "<http://hostname:portnum>".

### 1.3.2 Configure on iPhone / iPad

Before configuring this camera on iPhone / iPad, make sure:

- You have installed our mobile program, *EagleEyes-Lite* or *EagleEyes-Plus*, on your iPhone or iPad. For details, please refer to “APPENDIX 2 MOBILE SURVEILLANCE VIA EAGLEYES” at page 20.

---

**Note:** EagleEyes HD for iPad doesn’t support network configuration. Please install *EagleEyes-Lite* or *EagleEyes-Plus* on your iPad instead.

---

- (Recommended) Your wireless router supports UPnP, and this function is enabled.


---

**Note:** If your wireless router doesn’t support UPnP, you need to additionally access your router for port forwarding. For details, please refer to “APPENDIX 3 CONFIGURE PORT FORWARDING” at page 21.

---

- Your camera is connected to your wireless router with a RJ45 network cable, and it’s powered on.

---


**Note:** Check  (LAN) status indicator is always on, not blinking. If it’s blinking, check your RJ45 network cable and ensure it’s not disconnected or defect.

---

- You have checked the IP address used by your wireless router with the camera connected as instructed below, and written it down. You’ll need it later.

Connect your iPhone / iPad to the wireless router with the camera connected, and go to “Settings” → “Wi-Fi”. Select “>” near the selected wireless network to enter the details.

The IP address shown in “Router” is the IP address used by your wireless router. In the following example, the IP address of your router is *192.168.2.1*.

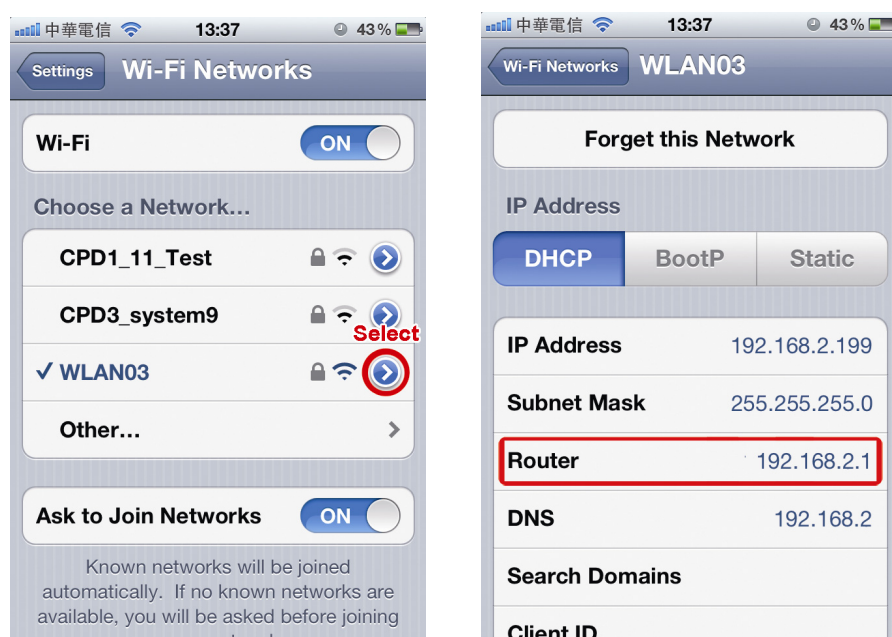


---

**Note:** This address will be needed when you want to access your router for port forwarding later.

---

Step1: Connect your iPhone to the wireless router which has the camera connected.

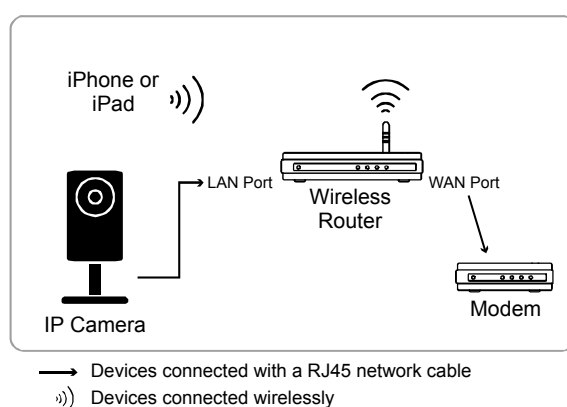

Step2: Open “EagleEyes” on your iPhone or iPad.


In the address book, click “+” to add new device. Then, select “Local Network Search” to search your network camera. You’ll see an IP address assigned by your router.



**Note:** If you can't find the camera, make sure your LAN status indicator (🔌) is always on, and search again after 3 minutes.

If you connect two or more cameras to the wireless router, you'll see many cameras with different IP addresses after searching. To know which camera you're configuring, you may identify each with its unique MAC address.


**Note:** The MAC address can be found on the sticker at the rear panel of the camera.

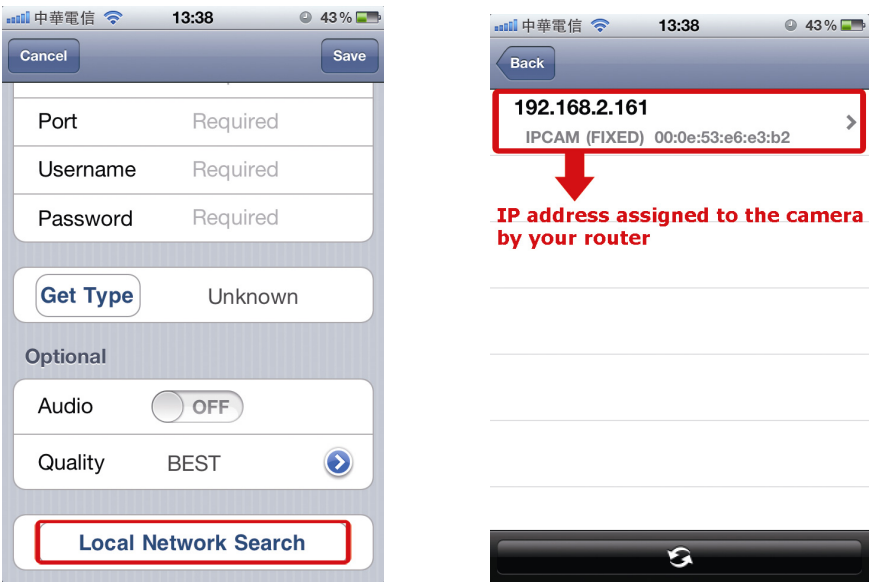

Step3: Select the IP address you want to configure to show the IP address setting page.

Switch the tab from "DHCP" to "Static".

The default port number is 88. You may change it to any value (such as 8080) if the port number of 88 is blocked.

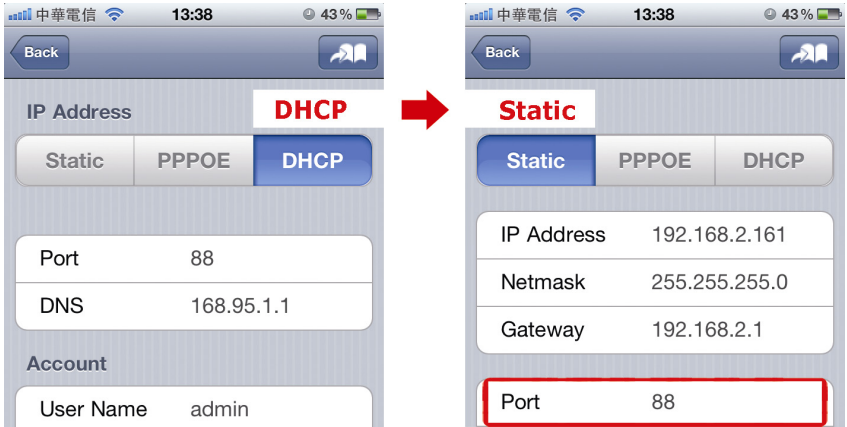


Keep or change the default vlaue, and write it down.

Step4: Select "Apply" to confirm all your changes. Then, wait till you see "**Done**" or "**Fail**" in "Status".

Regardless which message you see, proceed as instructed below:

- For **Done**, you'll return to the new device page.
- For **Fail**, select "🔌" on the top right side. You'll later be prompted to select "DDNS" or "Local IP". Select "DDNS" and return to the new device page.

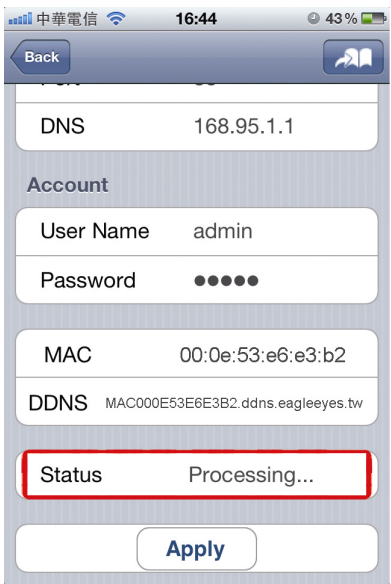

Status Change  
When Selecting "Apply":  
Processing...  
↓  
"Done" or "Fail"

Step5: In the new device page, give a meaningful name for this connection in “Title”, and click “Save”.

Please continue with configuring port forwarding as instructed in “APPENDIX 3 CONFIGURE PORT FORWARDING” at page 21.

Cancel Save

Required

Title my home

IP Address MAC000E53E6E3B2....

Port 88

Username admin

Password •••••

Get Type IPCAM (FIXED)

Optional

Audio OFF

### Check your connection

Step1: Switch the network mode to 3G mode on iPhone or iPad.

Step2: Start EagleEyes, and select the connection you just added to see if you can access the camera successfully.

- If yes, your network setup is successfully.
- If no, go to Step3.

Step3: Switch your network mode to wireless mode on iPhone or iPad.

Step4: Start EagleEyes, and add a new connection with the IP address (e.g. 192.168.2.25) and the port number (e.g. 88). Then, try this connection and see if you can access the camera successfully.

- If yes, go for port forwarding setting as instructed in “APPENDIX 3 CONFIGURE PORT FORWARDING” at page 21.
- If no, return to Step1 in “1.2.2 Configuring on iPhone / iPad” and re-configure the network again.

## 1.4 Router + Modem

You may use your laptop / PC to complete the network configuration of the camera.

Before configuring this camera on your laptop / PC, make sure:

- Your Windows operating system is Windows 7, Vista or XP.
- (Recommended) Your router supports UPnP, and this function is enabled.

**Note:** If your wireless router doesn't support UPnP, you need to additionally access your router for port forwarding. For details, please refer to “APPENDIX 3 CONFIGURE PORT FORWARDING” at page 21.


- You have noted down the IP address of your router.

**Note:** For details, please refer to the user manual of your router, or check with your installer.

- You have downloaded “IPScan.exe” in your laptop / PC.

**Note:** Please download “IPScan.exe” from [www.surveillance-download.com/user/m301.swf](http://www.surveillance-download.com/user/m301.swf).

Step1: Connect your laptop / PC to the router.

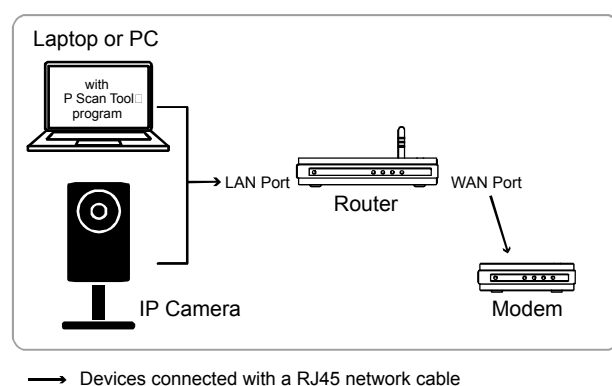

Step2: Open "IPScan.exe" (🔍) to search your camera, and:


- Note down the IP address and port number after search, such as "192.168.2.25" and "88" in our example.
- Select the IP address, and click "Configure" to note down the gateway IP address. It's the address of your wireless router, and you might need it later for port forwarding.
- Change the port you're using for this camera to other value (such as "8080") in "Web Port" if you know the default port number "88" is blocked by your Internet service provider or phone carrier. Then, enter the user name (admin) and password (admin) to confirm.

The number of "80" is not recommended to use since some Internet service providers and phone carriers might block the use of "80".

**192.168.2.25:**  
IP address assigned by your wireless router

**GateWay:**  
The IP address of your wireless router

**Web Port:**  
Keep the default value "88", or change it to other value (such as 8080) if the port number of 88 is blocked by your service provider.

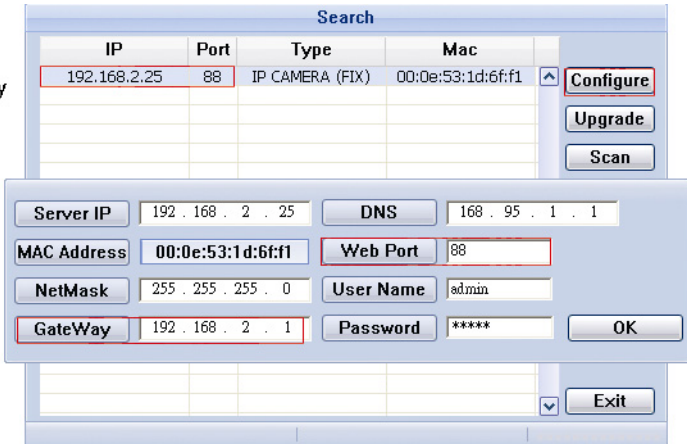

Step3: Open Internet Explorer on your laptop / computer, and enter the IP address and port number you just found in the URL column to access this camera.

The format is <http://ipaddress:portnum>, such as <http://192.168.2.25:88> in our example.


In the login page, enter the user name, password, and security code to access.

---

**Note:** Please skip the wizard.

---

Step4: Go to "Config." → "DDNS", and enable the DDNS service.

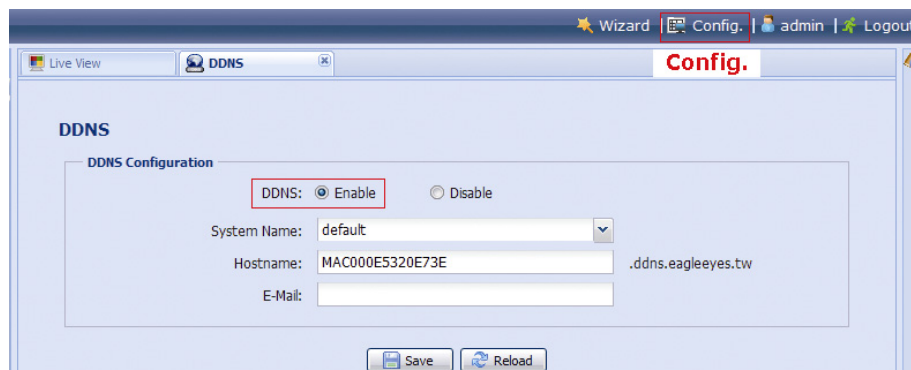

- If your router supports UPnP, please proceed Step5.
- If your router doesn't support UPnP, click "Save", and access your router for port forwarding as instructed in "APPENDIX 3 CONFIGURE PORT FORWARDING" at page 21.

Step5: Go to "UPnP", and enable the UPnP service.

Then, enable "Port Mapping", and click "Save" to start port mapping.

When the configurations are saved successfully, you'll see a message indicating the IP address and port number assigned to your device.

Note down the IP address and port number, and log out the camera.



## Check your connection

Step1: Open your web browser, e.g. Internet Explorer.

Step2: Enter the IP address or host name you just noted down and the port number in the URL address box of the web browser, and see if you can access the login page of the camera successfully.

The format is “**http://ipaddress:portnum**” or “**http://hostname:portnum**”.


## 1.5 Modem / Hub + Modem

You may use your laptop / PC to complete the network configuration of the camera.

Before configuring this camera on your laptop / PC, make sure:

- Your Windows operating system is Windows 7, Vista or XP.
- You have changed the IP address of your laptop / PC to “**192.168.1.xxx**”, where **xxx** could be 0~255 except 10.

**Note:** To know how to change the IP address of your laptop / PC, please refer to “APPENDIX 1 CHANGE IP ADDRESS OF YOUR LAPTOP / PC” at page 17.

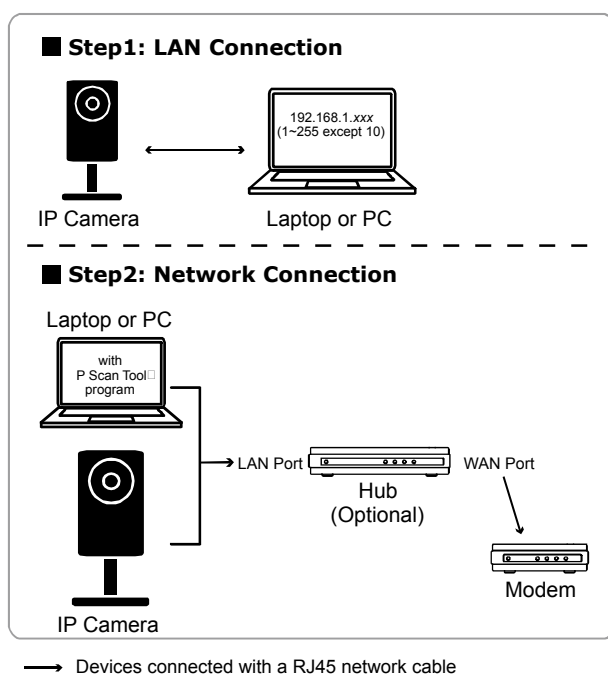

Step1: Disconnect your laptop / PC from the hub or modem, and connect it to this camera with a network cable.


**Note:** Make sure the IP address of your laptop / PC is changed to “**192.168.1.xxx**” (1~255 except 10). To know how to change, please refer to “APPENDIX 1 CHANGE IP ADDRESS OF YOUR LAPTOP / PC” at page 17.

Step2: Open the web browser, such as Internet Explorer, on your laptop / PC, and enter “http://192.168.1.10:88” on the URL column to access this camera.

In the login page, enter the user name, password, and security code to access.

**Note:** The default user name and password for remote access are both “**admin**”.

Step3: The wizard starts to analyze your network environment. When it's completed, select “One Step Wizard” to enter the quick camera setting page.

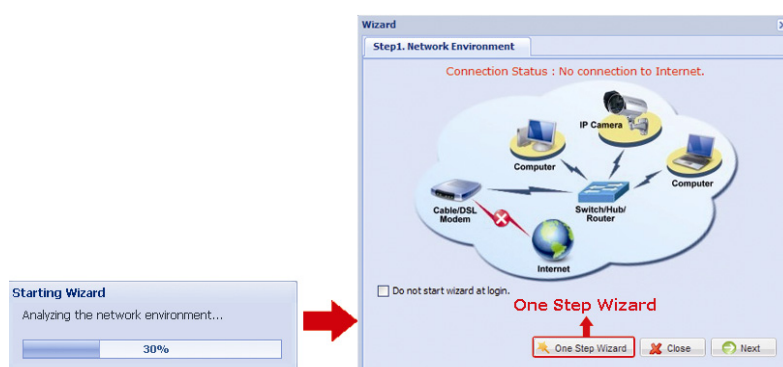

The 'One Step Wizard' window is divided into three main sections:

- Account:** Includes fields for Username (admin), Password, New Password, and Confirm Password.
- Date and Time:** Includes a Date field (2011/09/20) and a Time field (15:28:36).
- Network:** Includes radio buttons for IP Type (Static IP, **PPPoE**, DHCP). Below are fields for Username (c33158935), Password (masked with dots), Port (80), DNS1 (168.95.1.1), DNS2 (0.0.0.0), and MAC Address (00:0e:53:1d:6f:f1). A 'DDNS' button is located next to the MAC Address field.

At the bottom right, there are buttons for 'Wizard', 'Close', and 'Save'.

Item	Description
Account	Change your default account password if needed. This change can also be made in “Config.” → “General” → “Account”.
Date and Time	Check and select the current date and time.
Network	Configure your network setting based on the network type you’re using. For details, please refer to Step4 & Step5.

Step4: In “Network”, configure the network setting of your camera based on the network type you’re using. There’re three types: Static IP, PPPOE and DHCP.

For Static IP:

- Enter the information of “Server IP”, “Gateway” and “Net Mask” obtained from your ISP (Internet Service Provider).
- Enter the port number. The valid number ranges from 1 to 9999. The default value is 88.
- Click “Save” to save your network configurations, and log out.
- Disconnect your camera and your PC, and connect them to Internet separately. Then, enter the IP address you just note down in the URL address box of the web browser, and see if you can access the camera successfully.

For PPPOE:

- Enter the user name and password obtained from your ISP, and click “Save”.
- Continue the DDNS setting as instructed in Step5.

For DHCP:

- Before selecting this option, you need to finish the DHCP router settings first.
- Get a router and connect it to the Internet via your PC (with Static IP or PPPoE setting). There are different setting methods for different routers. Please refer to their respective user manuals.
- Continue the DDNS setting as instructed in Step5.

Step5: (Optional) Click “DDNS” ( DDNS ) to continue setting for PPPOE and DHCP.

The 'DDNS' window has the following settings:

- DDNS:** ☒ Enable ☐ Disable
- System Name:** default (dropdown menu)
- Hostname:** MAC000e531d6ff1 .ddns.eagleeyes.tw
- E-Mail:** manager@tech.com.tw

A 'Save' button is located at the bottom right.



- a) Enable DDNS.
- b) Select “default” in “System Name”.
- c) In “Hostname”, keep the default value, i.e. the MAC address of this camera. Then, note down the whole address of the camera, for example, *MAC000e531d6ff1.ddns.eagleeyes.tw*.
- d) (Optional) Enter your email address to receive messages from the DDNS server.


---

**Note:** Please at least use the default address to access your network camera remotely once. This is to ensure our DDNS server has your camera registered. Then, you may change the host name to a more meaningful name to memorize later here.

---

- e) Click “Save” to return to the network setting page. Then, click “Next”.

Step6: Check if the changes you’ve made are correct, and click “Save” to complete.

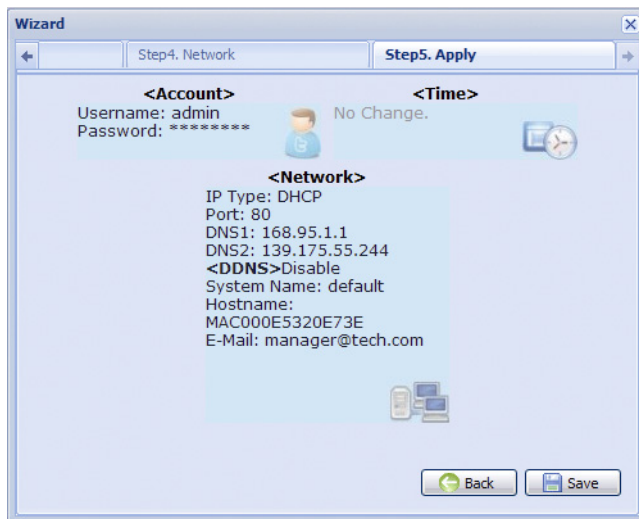

### **Check your connection**

Step1: Disconnect your camera and your laptop / PC, and connect them to Internet separately.

---

**Note:** If you changed the IP address of your laptop / PC for LAN connection, remember to restore it back for Internet access to work properly.

---

Step2: Enter the host name you just noted down and the port number in the URL address box of the web browser, and see if you can access the login page of the camera successfully.


The format is “*http://hostname:portnum*”.

## 1.6 Change Default Account


To ensure your account safety, please access the camera after network configuration to change the default user name and password with new one you prefer.


### 1.6.1 From Web Browser

Log into the camera, and select “Config.” → “General” → “Account”.  
Select the default account “admin”, and click “Edit” to change the default password.

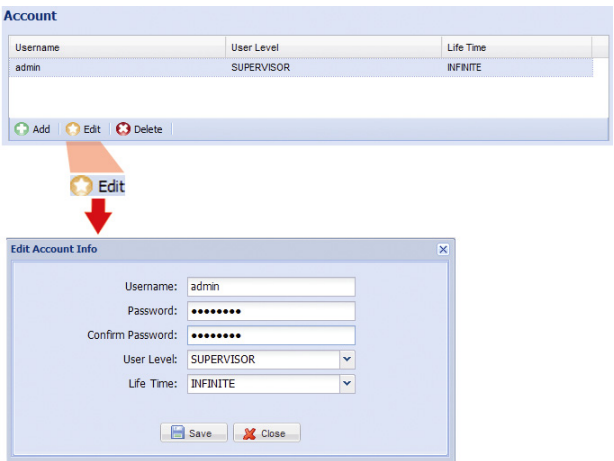

### 1.6.2 From iPhone / iPad

Log into the camera, and click “” on the top right corner to enter the system configuration page.  
Select “Advance Setup” → “Account”. Then, select the default account “admin”, and click “Edit” to modify the default password.

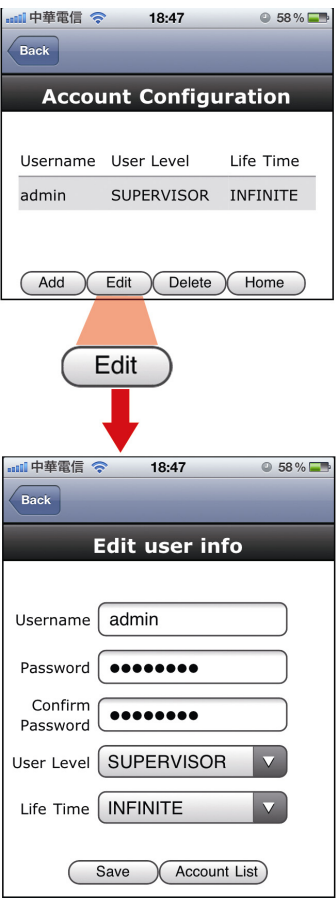


## 2. BEFORE YOU START TO USE

After you finish network configurations, some camera configurations in “Config.” are recommended to complete for the camera to work properly.

Below assumes you’re using Internet Explorer to access the camera.

---

**Note:** For iPhone users, please access the camera, and select  on the top right corner of the live view to enter the configuration page.


---

### 2.1 Video Adjustment


When you’ve accessed the camera successfully for the first time, it’s recommended to adjust the video images if needed.

- To adjust the clearness of the video, rotate the camera lens manually as shown in *Figure 1*.
- To slightly adjust the color of the video, in the live page of your web browser, click “Config” on the top right side of the browser to open the configuration page.

Then, click “Camera” → “Color” to adjust the brightness / contrast / hue / saturation of the video images, as shown in *Figure 2*.

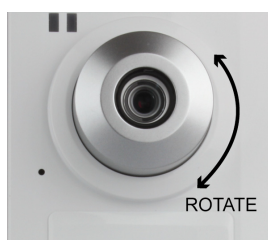

*Figure 1*

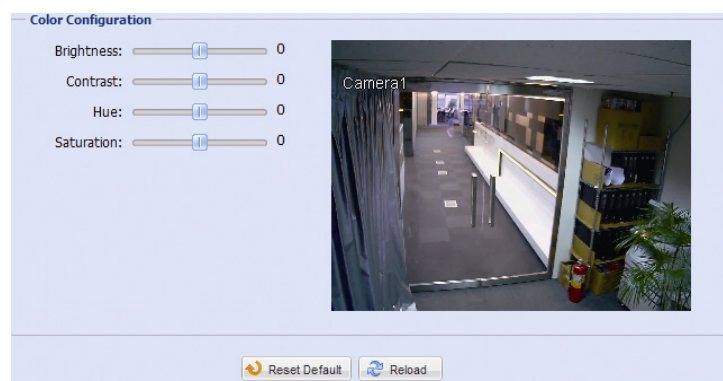

*Figure 2*




## APPENDIX 1 CHANGE IP ADDRESS OF YOUR LAPTOP / PC

For LAN connection with this network camera, you need to change the IP address of your laptop / PC to **192.168.1.xxx** (1~255, except 10) first.

**Note:** Before changing the IP address, make sure you note down the original IP address setting of your laptop / PC. You need to restore the IP address setting when you complete the network configuration of this camera.

For Windows XP users:

- a) Select “start” → “Control Panel” → “Network and Internet Connections” → “Network Connections” (If you’re in “Category View”).

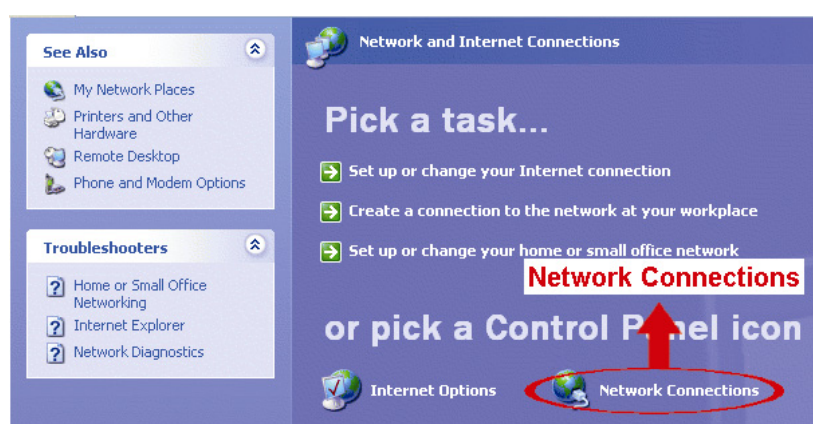

- b) In “LAN or High-Speed Internet”, right-click on “Local Area Connection”, and select “Properties”.




**Note:** If your local area connection is not enabled, please also enable it.

- c) In the “General” tab, select “Internet Protocol (TCP/IP)”, and select “Properties”.  
d) In the “General” tab, select “Use the following IP address”, and set the IP address to “192.168.1.XXX” (XXX can be any value from 1~255 except 10).


**Note:** It’s recommended to note down the current settings first and then change as instructed. It’s helpful when you need to restore the PC network settings for connecting to Internet later.

- e) Click “OK” to close the “Internet Protocol (TCP/IP) Properties” dialog box. Then, click “Close” to close the “Local Area Connection Properties” dialog box.

For Windows Vista users:

- a) Select “


- b) Right-click on “Local Area Connection”, and select “Properties”.

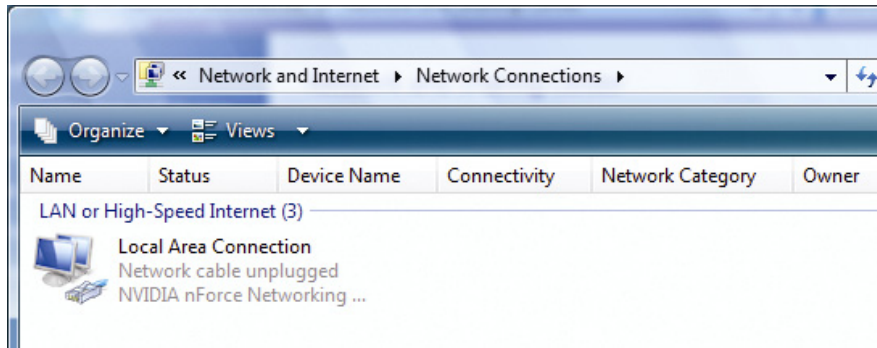

**Note:** If your local area connection is not enabled, please also enable it.


- c) In the “Networking” tab, select “Internet Protocol Version 4 (TCP/IPv4)”, and select “Properties”.
- d) In the “General” tab, select “Use the following IP address”, and set the IP address as described below.

**Note:** It’s recommended to note down the current settings first and then change as instructed. It’s helpful when you need to restore the PC network settings for connecting to Internet later.

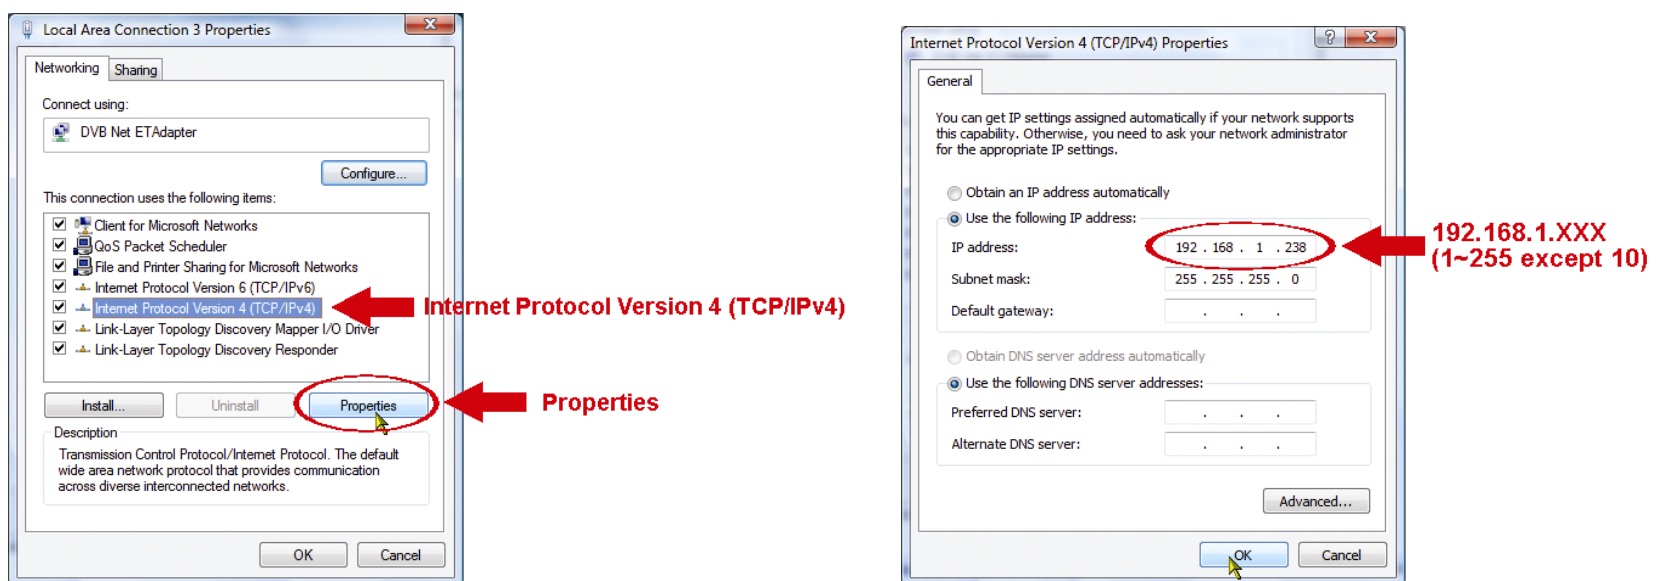


- e) Click “OK” to close the “Internet Protocol Version 4 (TCP/IPv4) Properties” dialog box. Then, click “Close” to close the “Local Area Connection Properties” dialog box.

For Windows 7 users:

- a) Select “

b) Right-click on “Local Area Connection”, and select “Properties”.

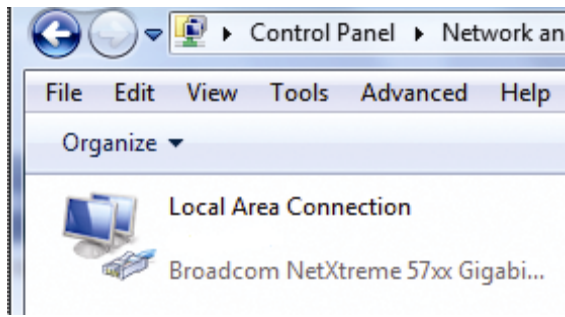


**Note:** If your local area connection is not enabled, please also enable it.

c) In the “Networking” tab, select “Internet Protocol Version 4 (TCP/IPv4)”, and select “Properties”.

d) In the “General” tab, select “Use the following IP address”, and set the IP address as described below.

**Note:** It’s recommended to note down the current settings first and then change as instructed. It’s helpful when you need to restore the PC network settings for connecting to Internet later.

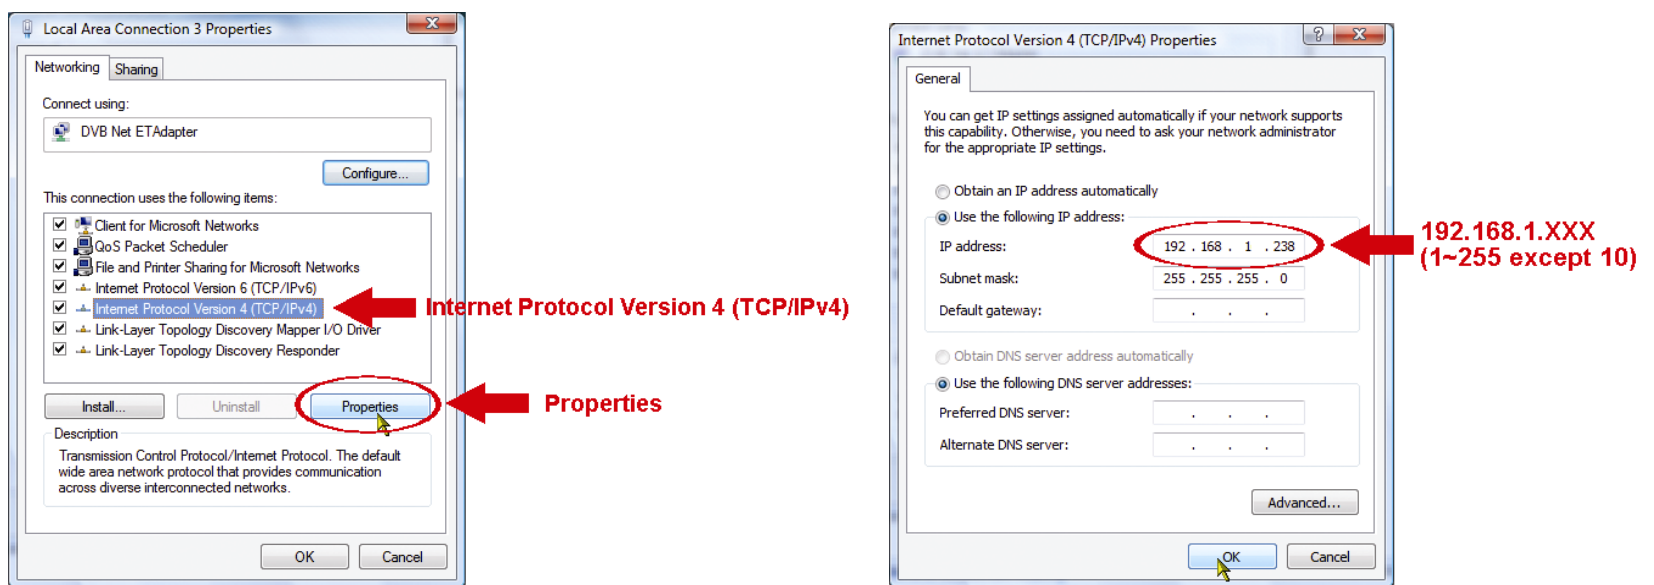

e) Click “OK” to close the “Internet Protocol Version 4 (TCP/IPv4) Properties” dialog box. Then, click “Close” to close the “Local Area Connection Properties” dialog box.

## APPENDIX 2 MOBILE SURVEILLANCE VIA EAGLEEYES

*EagleEyes* is a mobile phone program used with our surveillance system for remote surveillance. It has several advantages:

- It's free (Except *EagleEyes Plus* for iPhone).
- It's compatible with several popular mobile platforms, such as iPhone, iPad and Android.

It's easy to download, install and configure. For more details about configuring and operating this program, please visit our official website [www.eagleeyesccctv.com](http://www.eagleeyesccctv.com).

### A2.1 Prerequisites

Before installing *EagleEyes* to your mobile phone for remote surveillance, make sure you have checked the following:

- ✓ Your mobile platform is iPhone, iPad & Android.
- ✓ Mobile Internet services are subscribed and available to use for your mobile phone.

---

**Note:** You might be charged for Internet access via wireless or 3G networks. For the Internet access rate details, please check with your local network operator or service provider.

---

- ✓ You have noted down the IP address, port number, user name and password used to access your network camera from Internet.

### A2.2 Where to download

Connect to [www.eagleeyesccctv.com](http://www.eagleeyesccctv.com) from your mobile phone, and sign in.

---

**Note:** Please **DO NOT** try to download *EagleEyes* from your computer.

---

Then, select "Software" and the mobile platform of your phone to download *EagleEyes* to your phone.


- For Android & iPad, select the download link from the website to start downloading.
- For iPhone, two versions of *EagleEyes* are available:
  - *EagleEyes Plus* (US\$4.99), and
  - *EagleEyes Lite* (Free).

Select the version you want, and you'll be directed to "App Store" to download the application.

---

**Note:** You can also find *EagleEyes* on "App Store" from your iPhone. Go to "App Store", and select "Search". Enter the keyword "eagleeyes" to find and download the version you want.

---

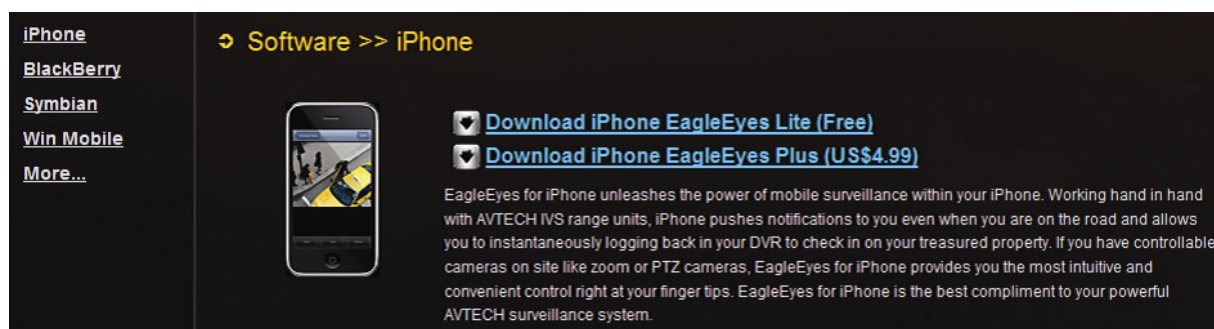

When the download is completed, *EagleEyes* will be installed automatically to the location where all applications are saved in your phone by default, or where you specify.

---

**Note:** For more details about configuring and operating this program, please visit our official website [www.eagleeyesccctv.com](http://www.eagleeyesccctv.com).

---



## APPENDIX 3 CONFIGURE PORT FORWARDING

You need to additionally access your router for port forwarding when your router doesn't support UPnP. Each router has different setting page. Here we're taking D-Link wireless router as an example.

## Step1: Access your router for port forwarding.

- If you're configuring the camera with laptop / PC or iPhone / iPad over wireless network, open your web browser, e.g. Internet Explorer or Safari, and enter the IP address of your router.
- If you're configuring the camera with laptop / PC over LAN, disconnect the camera and connect to your router. Then, open your browser, e.g. Internet Explorer, and enter the IP address of your router.

Step2: In the router setting interface, go to the port forwarding (or virtual server) rule configuration page.

**Note:** The naming of port forwarding or virtual server may vary based on different router brands. To know where it is, please refer to the user manual of your router.

Then, enter the IP address and port number you set for the camera, and enable this rule.

Take D-Link router as an example:

Go to "ADVANCED" → "PORT FORWARDING".

DIR-635

SETUP

ADVANCED

TOOLS

STATUS

SUPPORT

VIRTUAL SERVER

PORT FORWARDING

APPLICATION RULES

QOS ENGINE

NETWORK FILTER

ACCESS CONTROL

WEBSITE FILTER

INBOUND FILTER

FIREWALL SETTINGS

ROUTING

ADVANCED WIRELESS

WISH

WIFI PROTECTED SETUP

ADVANCED NETWORK

English

**PORT FORWARDING**

The option is used to open multiple ports or a range of ports in your router and redirect data through those ports to a single PC on your network. The feature allows you to enter ports in various formats including, Port Ranges (100-150), Individual Ports (80, 68, 898), or Mxed (1020-5000, 689). This option is only applicable to the INTERNET session.

Save Settings

Don't Save Settings

24 -- PORT FORWARDING RULES

	Name	Application Name	Ports to Open	Schedule	
<input checked="" type="checkbox"/>	my home IP Address 192.168.2.25	<< Application Name >>	TCP 88 UDP 88	Always Allow All	Inbound Filter Allow All
<input type="checkbox"/>	Name IP Address 0.0.0.0	<< Application Name >>	TCP UDP	Always Allow All	
<input type="checkbox"/>	Name IP Address 0.0.0.0	<< Application Name >>	TCP UDP	Schedule Always	
<input type="checkbox"/>	Name IP Address 0.0.0.0	<< Application Name >>	TCP UDP	Schedule Always Inbound Filter Allow All	

**Helpful Hints...**

Click the Application Name drop down menu for a list of predefined applications. If you select one of the predefined applications, click the arrow button next to the drop down menu to fill out the corresponding field.

You can select a computer from the list of DHCP clients in the **Computer Name** drop down menu, or you can manually enter the IP address of the LAN computer to which you would like to open the specified port.

Select a schedule for which the rule will be enabled. If you do not see the schedule you need in the list of schedules, go to the

IP Address:	The IP address of the camera, such as <i>192.168.2.25</i> .
Ports to Open:	The port number you set for the camera.

## APPENDIX 4 Q&A

For more details about EagleEyes Q&A, please visit our official website: [www.eagleeyesccv.com/supp\\_QnA.aspx](http://www.eagleeyesccv.com/supp_QnA.aspx).

Question	Answer
<p>I can connect to this camera in my house or office where it's installed with wireless network.</p> <p>But when I leave my house or office, I can't connect to it from my mobile phone (with 3G network), or other PC (connected to Internet). Why?</p>	<p>You didn't configure this camera to Internet, but only in LAN.</p> <p>Please follow the steps in this manual to complete network configurations, or it's recommended for you to check with your local installer or reseller for this service because it's usually hard for a person who doesn't have network knowledge to set network configurations.</p>
<p>My live images are not fluent. Why?</p>	<p>Image fluency could be affected by the local network upload bandwidth, router efficiency, client network download bandwidth, complexity of live view, and more.</p> <p>(Recommended) To have the best image fluency, select QVGA; to have the best image quality, select "SXVGA"; to have normal image fluency and quality, select "VGA".</p>
<p>The detection range of the built-in human detection sensor seems too short and the sensor is not sensitive enough. Did I do anything wrong on installation?</p>	<p>The human detection sensor might be influenced by the temperature of ambient environment and human beings, and the applicable working temperature is up to 30°C. To get more accurate and precise detection, you may connect external alarm devices, such as magnetic contacts.</p> <p>There're some tips for installation. For details, please go to <a href="http://www.eagleeyesccv.com/supp_QnA.aspx">www.eagleeyesccv.com/supp_QnA.aspx</a>.</p>
<p>The live video keeps flickering. Why?</p>	<p>Please try adjusting the power line frequency to "60 Hz" or "50 Hz" for the camera.</p> <p>For iPhone users, access the camera, and select "⚙️" on the top right corner to enter IPCAM Configuration page. Then, go to "Advance Setup" → "Camera" to change setting.</p> <p>For access from Internet Explorer, log into the camera, and select "Config." → "Camera" → "Camera".</p>